 
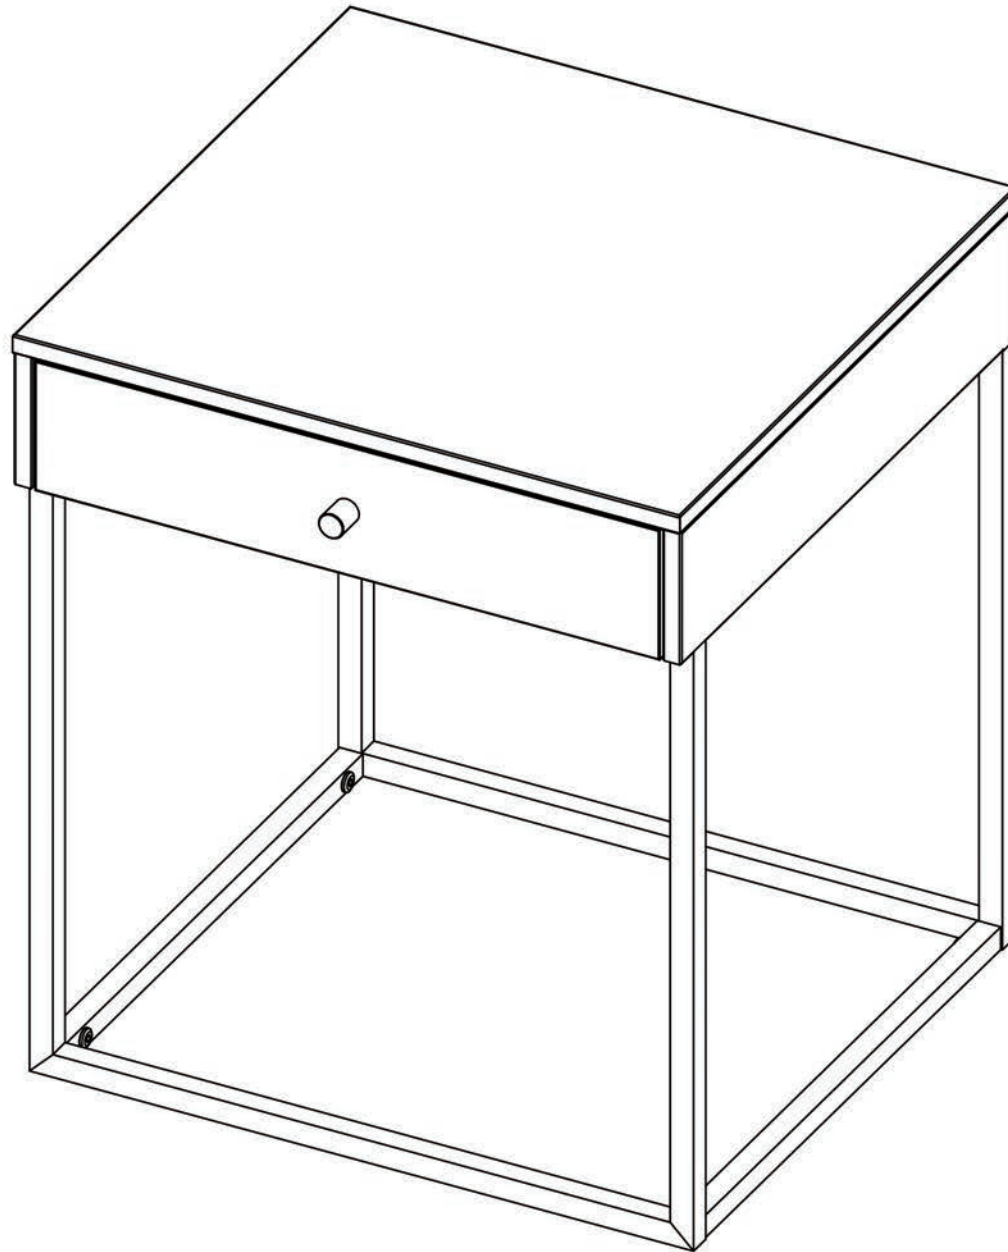 
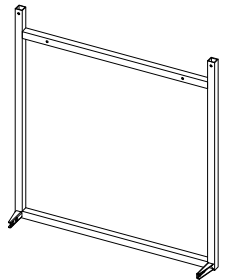 
 
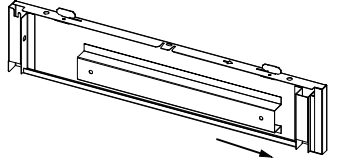 
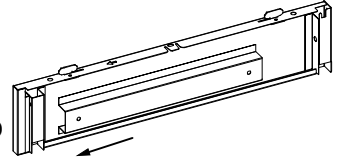 
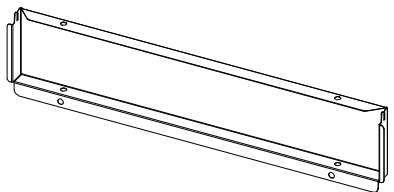 
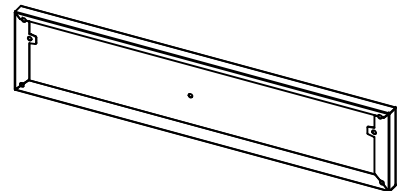 
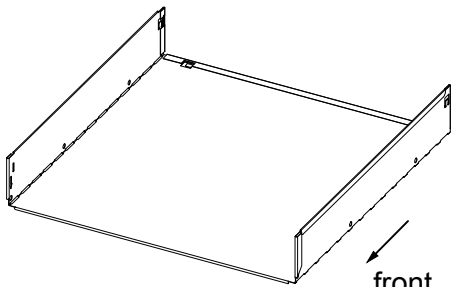 
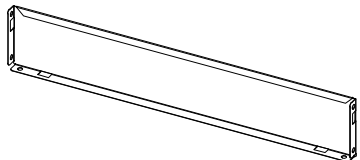 
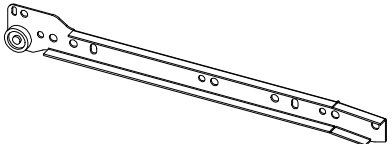 
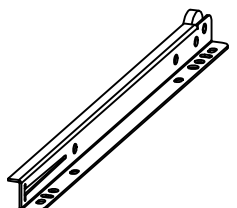 
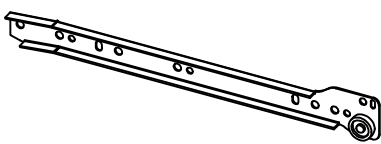 
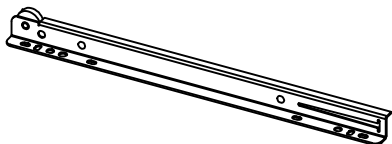 
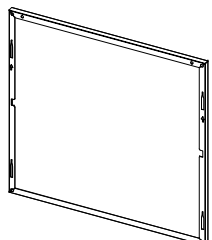 



Assembly Instruction (18066)



A  X2 ↑ front	B  X2	C  X1 front ↑ up	D  X1 ↑ up front			
E  X1 ↑ up	F  X1 ↑ up	G  X1 front	H  X2 ↑ up			
Left outer rail	Left internal rail	Right outer rail	Right internal rail			
I  X1	J  X1	K  X1	L  X1	M  X1		
Hardware parts						
A1  4pcs	A2  6pcs	A3  8pcs	A4  1pc	A5  1pc	A6  4pcs	


1

 A1x4

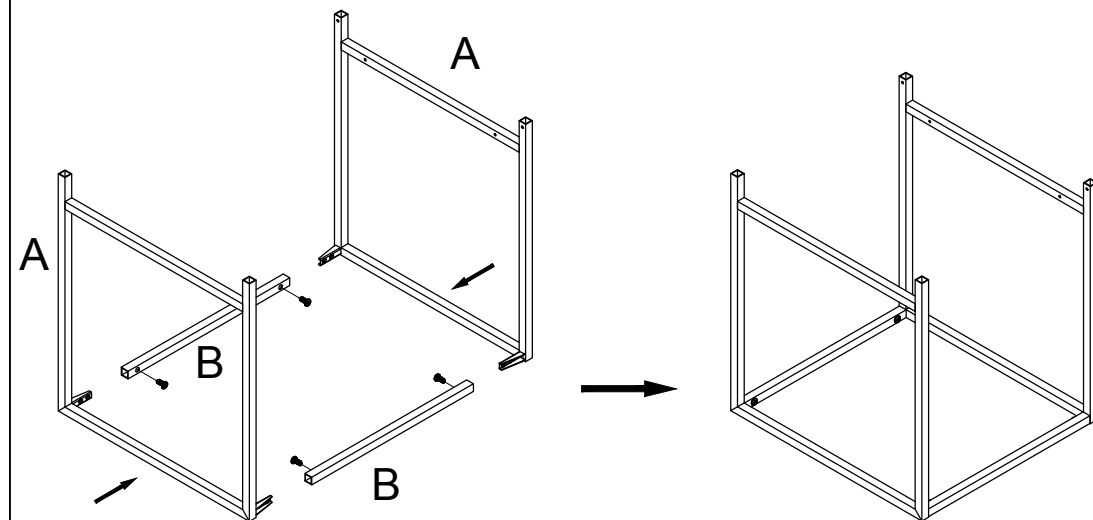


2

 A3x4

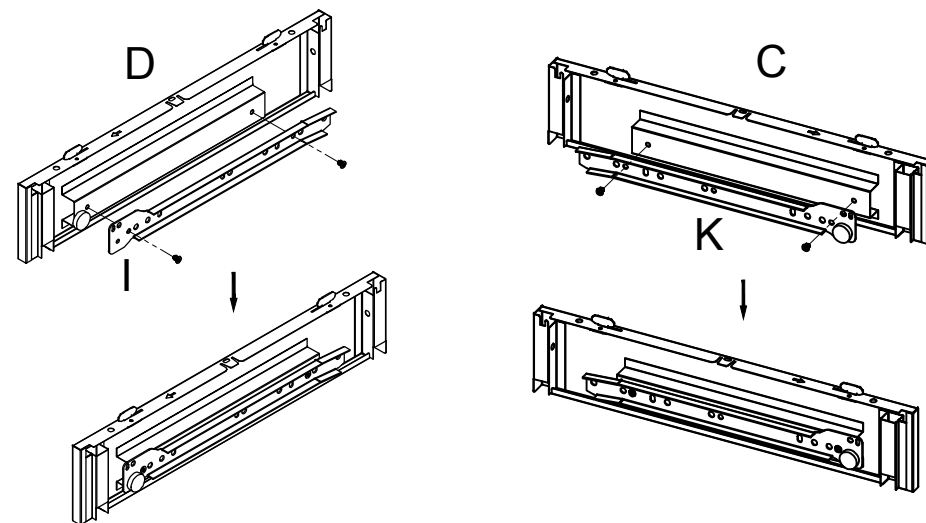


3

 A2x4

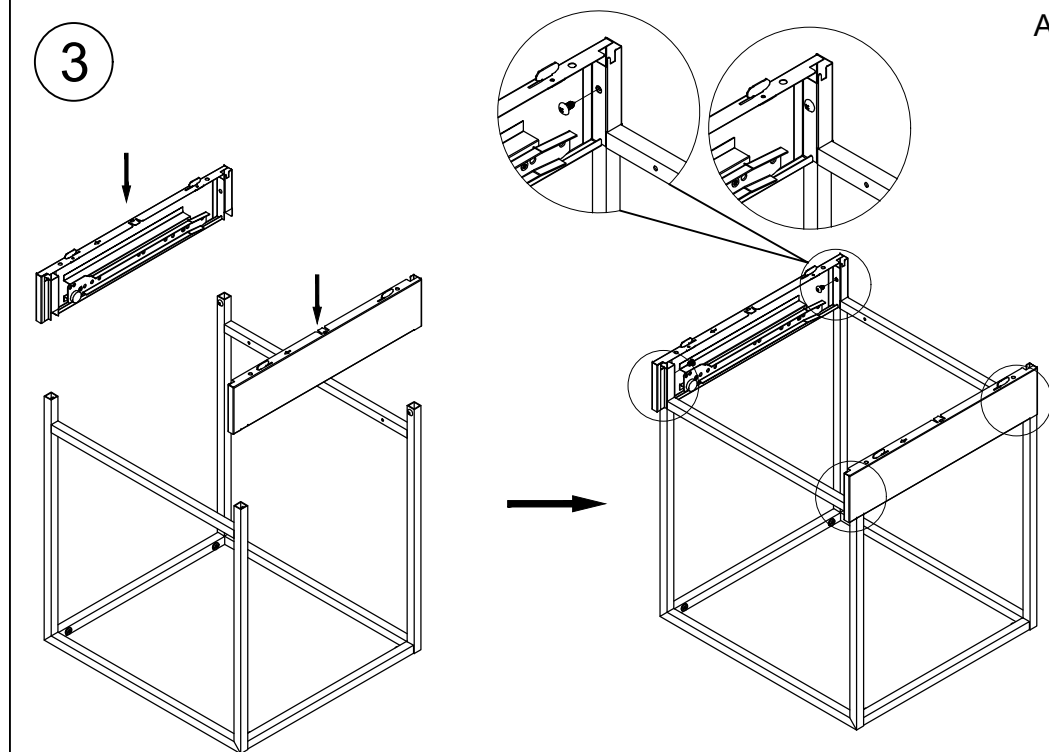


4

 
A2x2

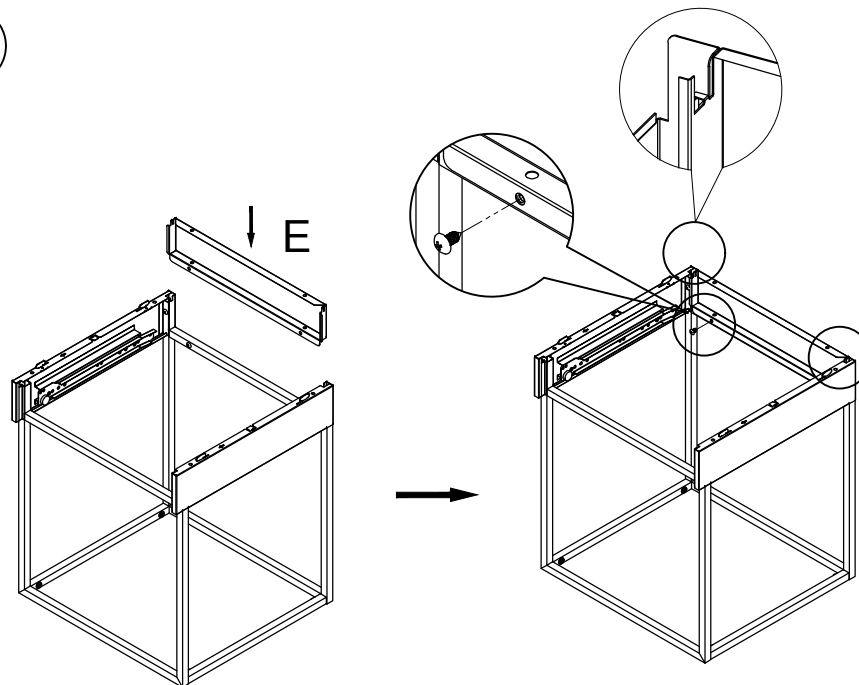


5

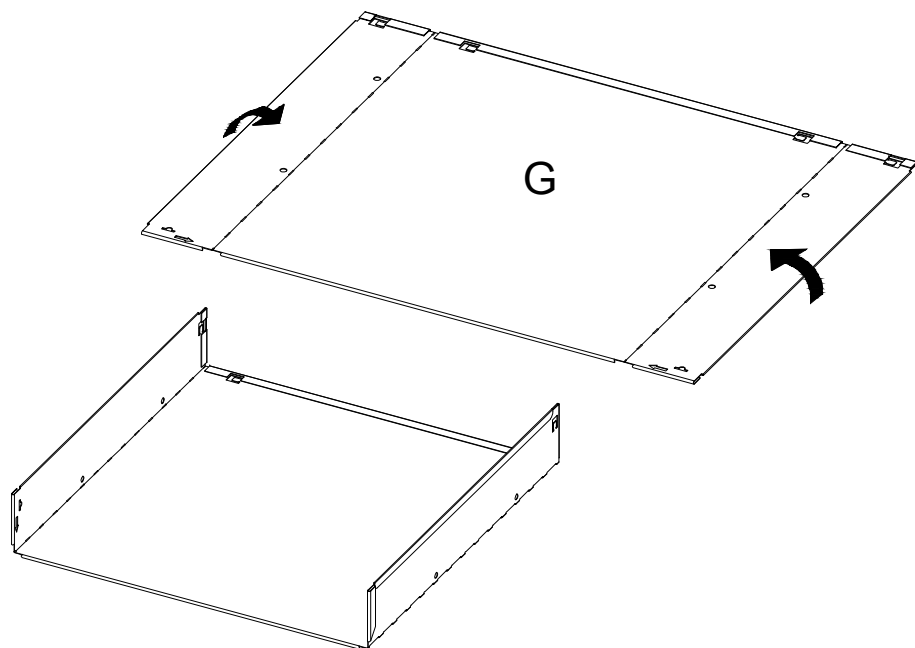 


6

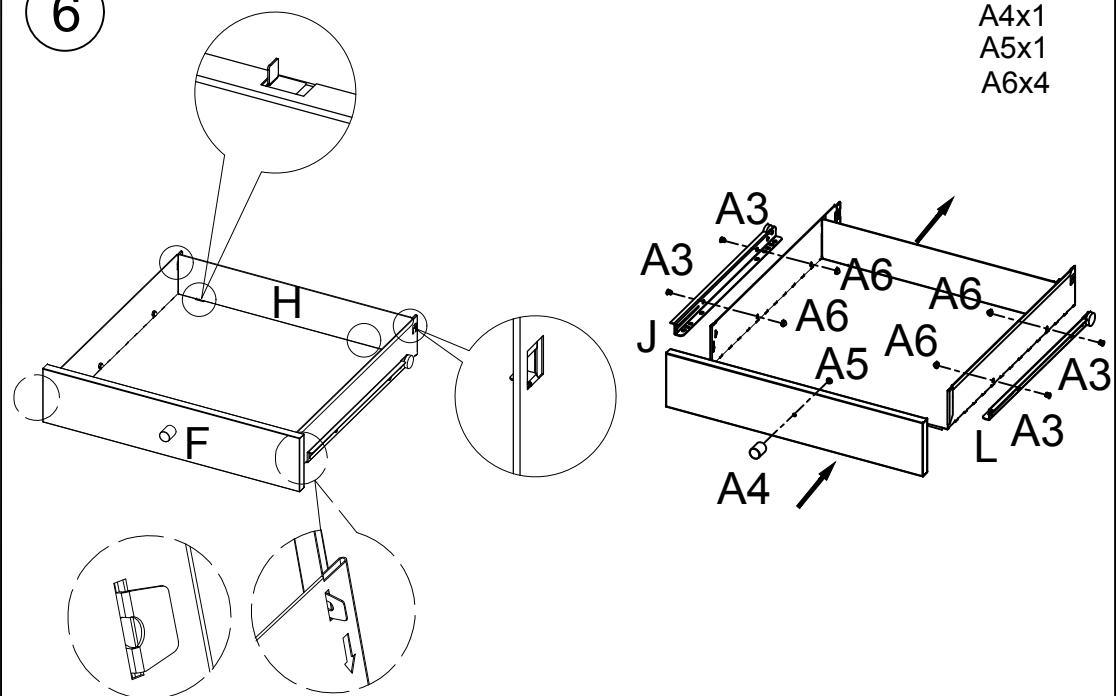 


7

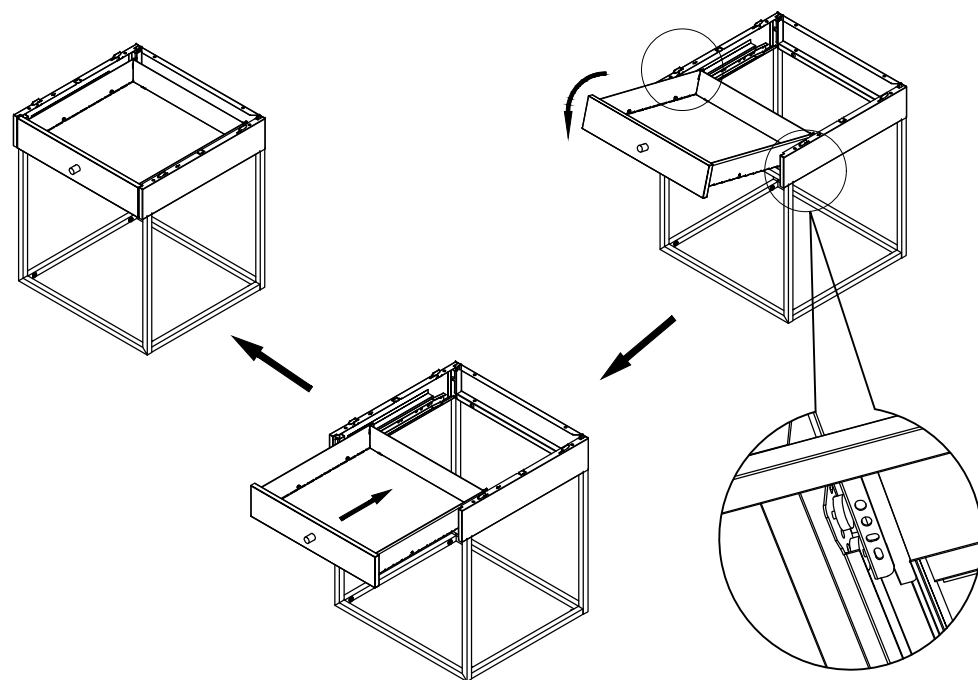 

8

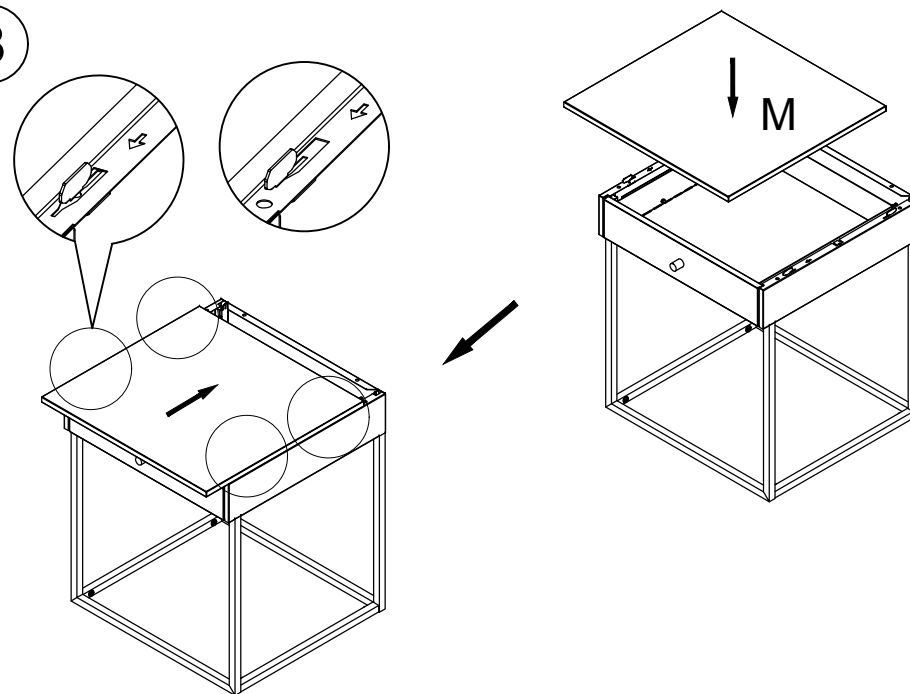 

9

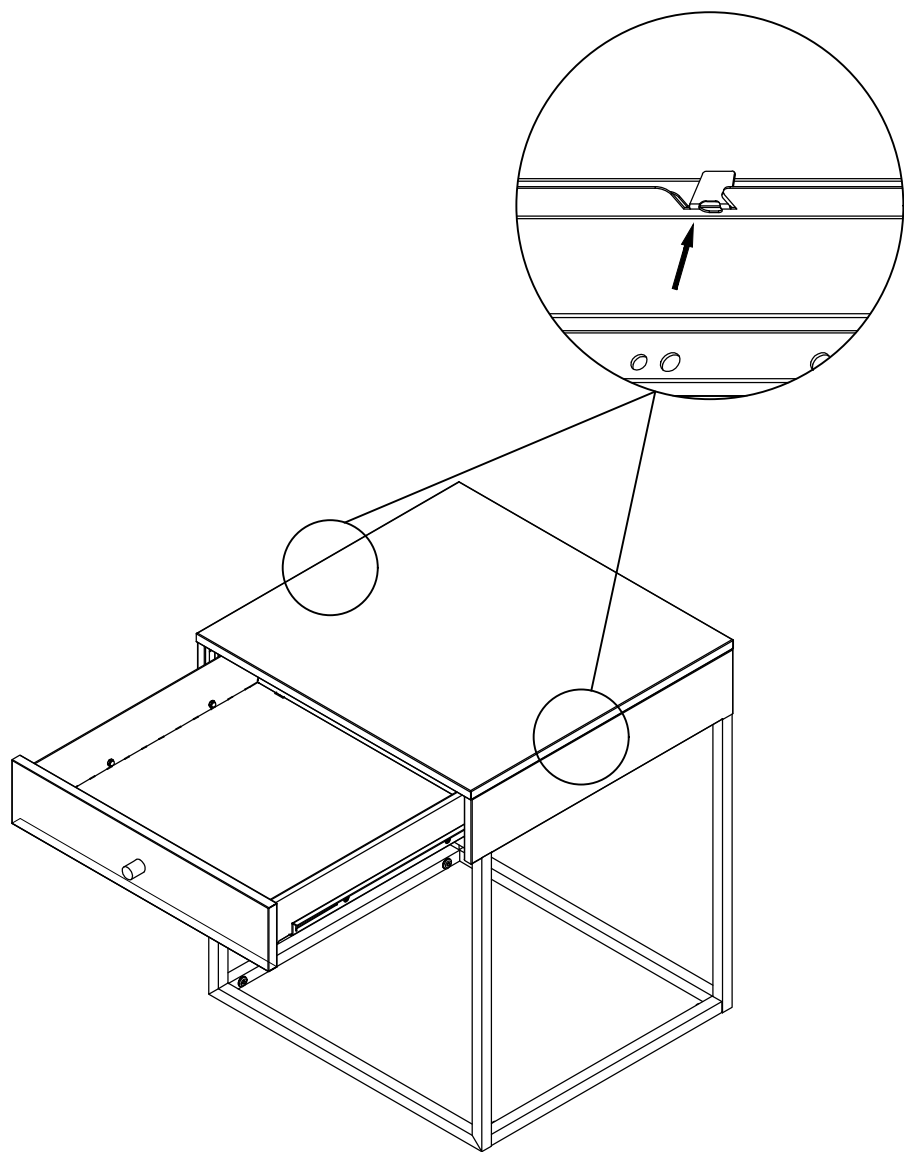 

10

