







3001200

Adelaide Steel Cabinet w.
Rippled Glass Door Black


HOUSE

NORDIC

	1 x37
spare:2	
	2 x2
ø6*30mm	
	3 x2
ø12*0.8mm	
spare:2	
	4 x2
spare:2	
	8 x4
spare:2	
	5 x2
	6 x2
	7 x12
spare:2	
	10 x2
	9 x2

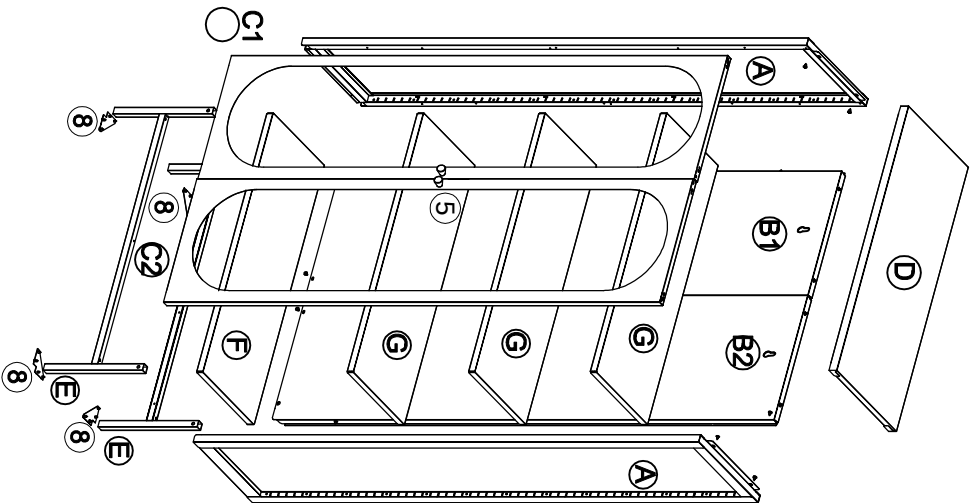


(1) - Attach (A) to (E) as below shown.

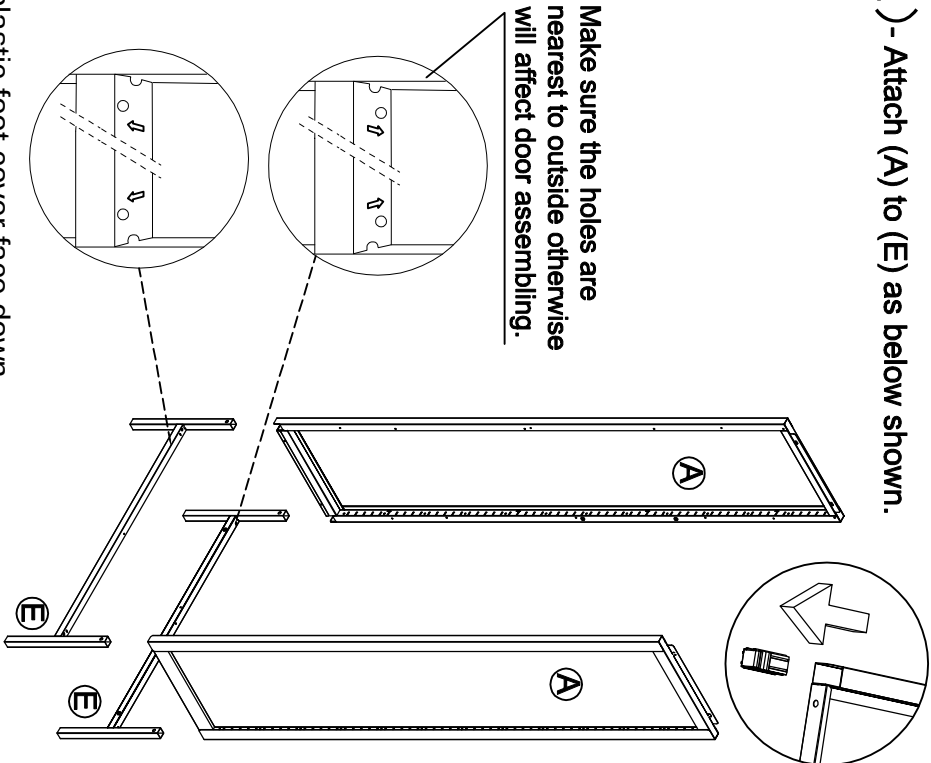


The plastic foot cover face down


(3) - Attach (B) to (A) & (E) as below shown.

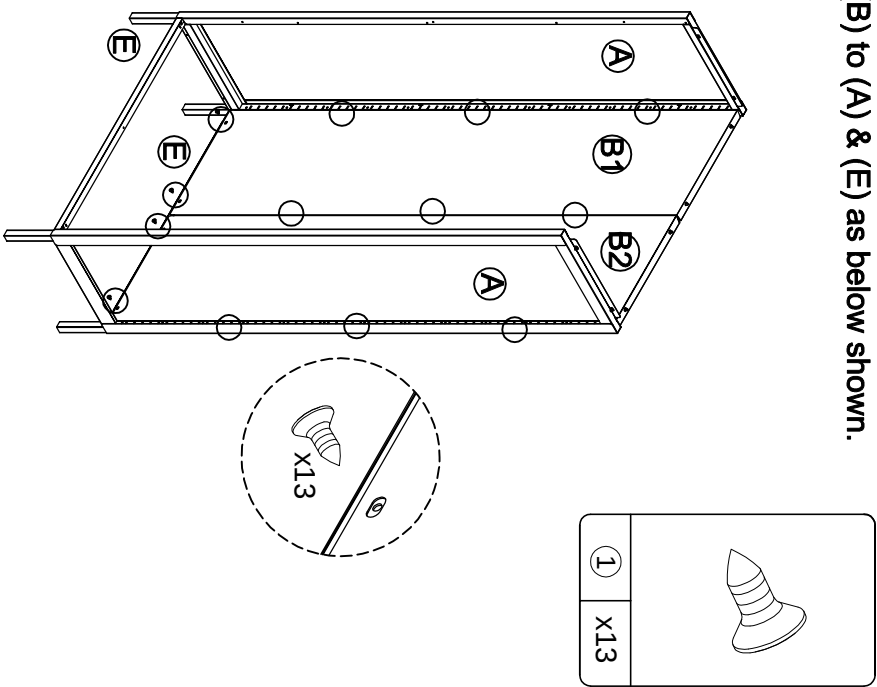



(2) - Attach ⑧ to (E) as below shown.

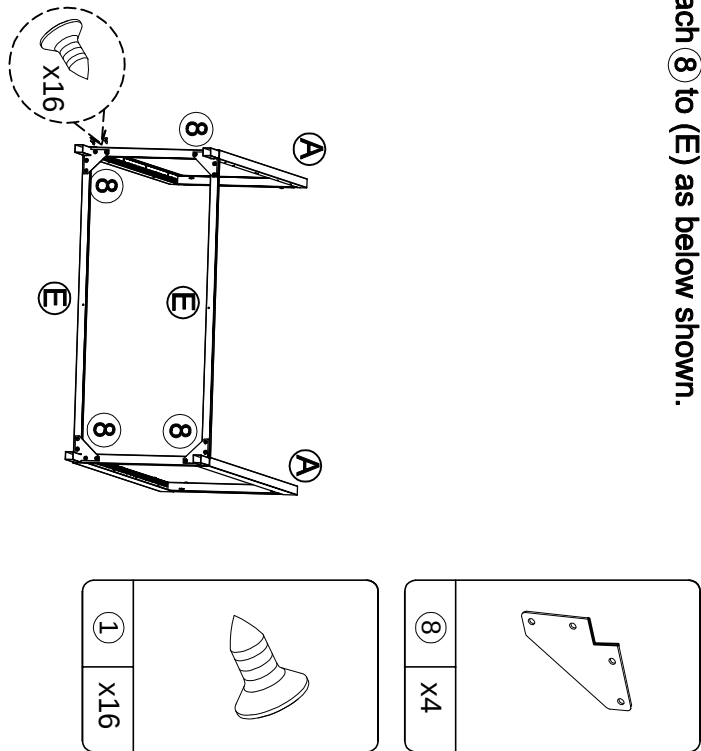



(4) - Attach (F) to (A) & (B) & (E) as below shown.

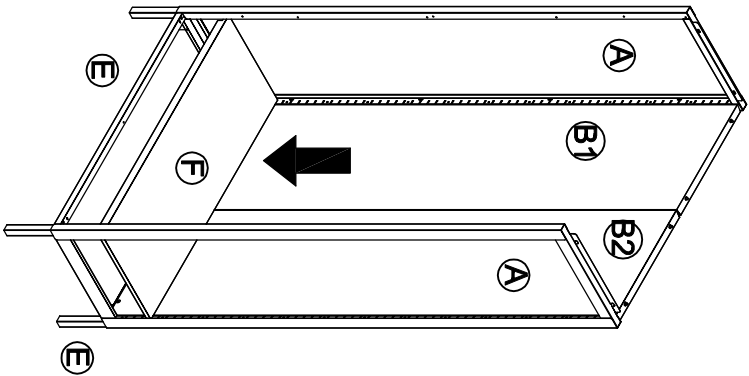





(5) - Attach (D) to (A) as below shown.

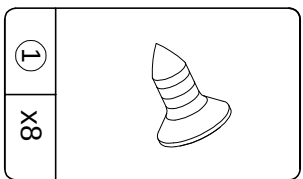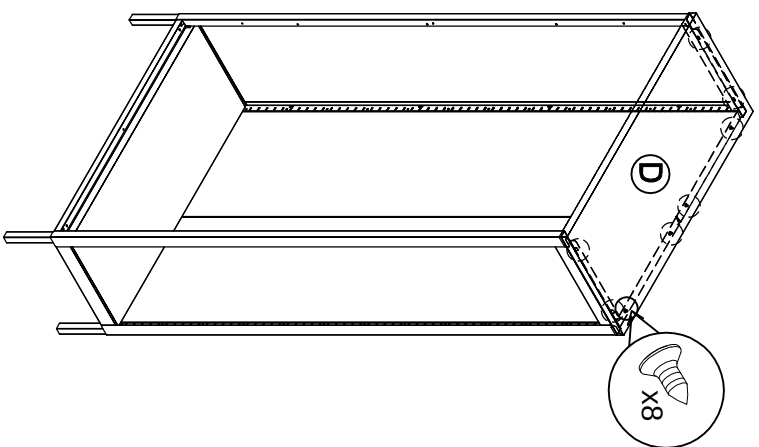




(6) - Attach (G) to pre-assembled unit as below shown.

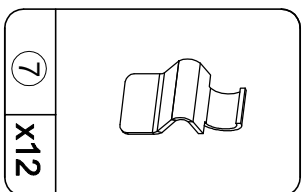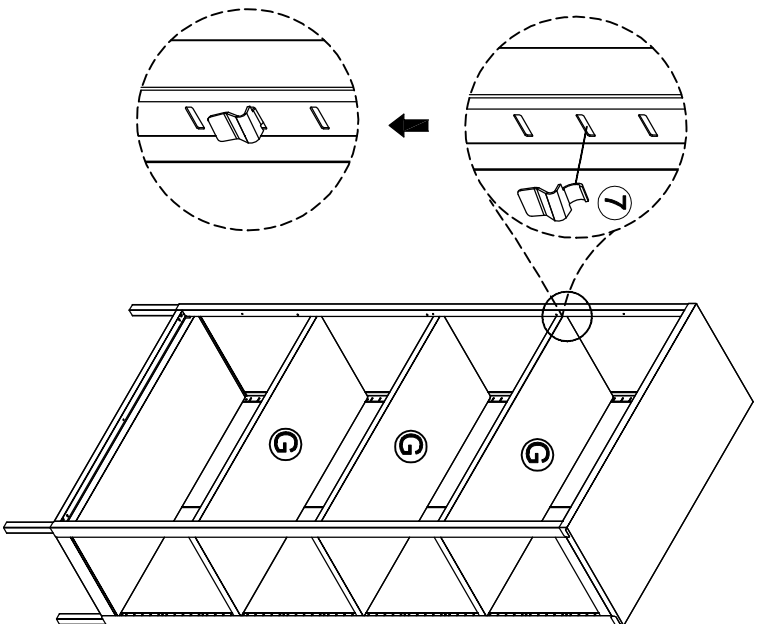


(7) - Attach (6) to (C) as below shown.

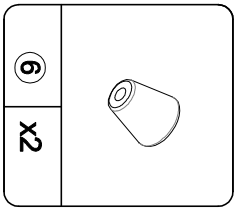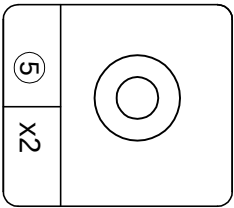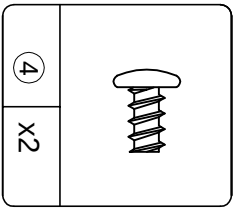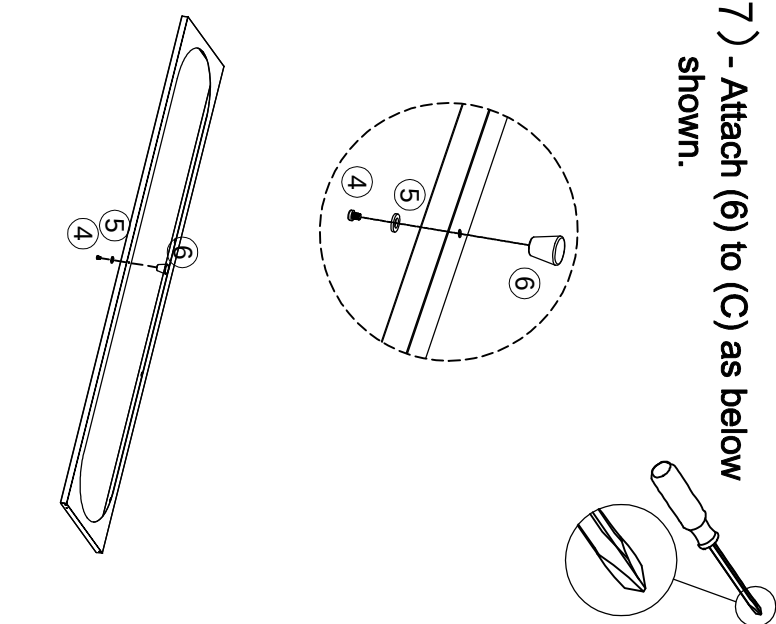




(8) - Attach (2) & (3) to pre-assembled unit as below shown.

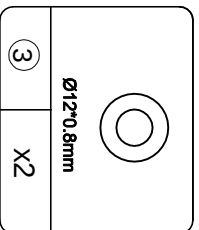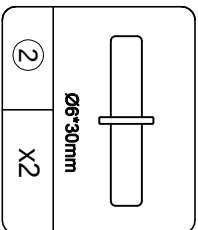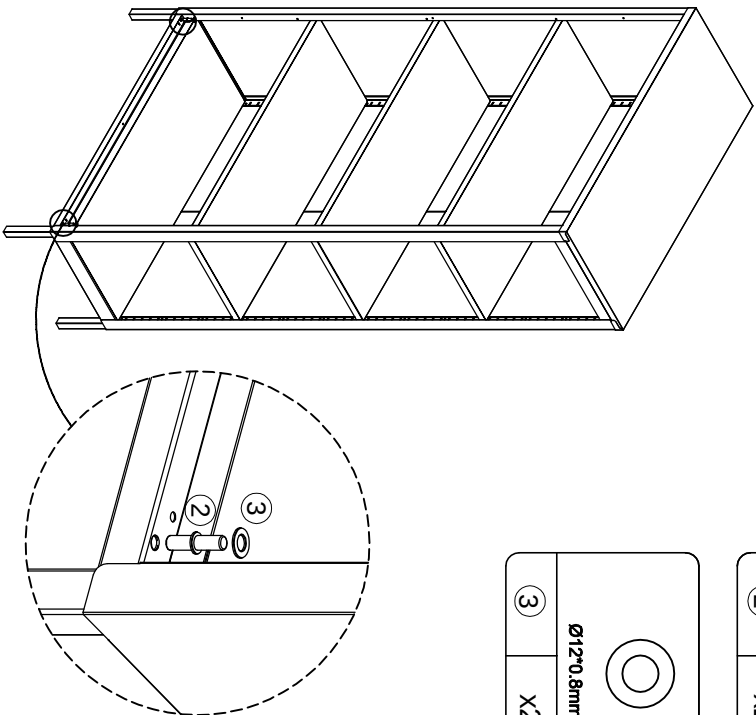

(9) - Attach (C) to pre-assembled unit as below shown.

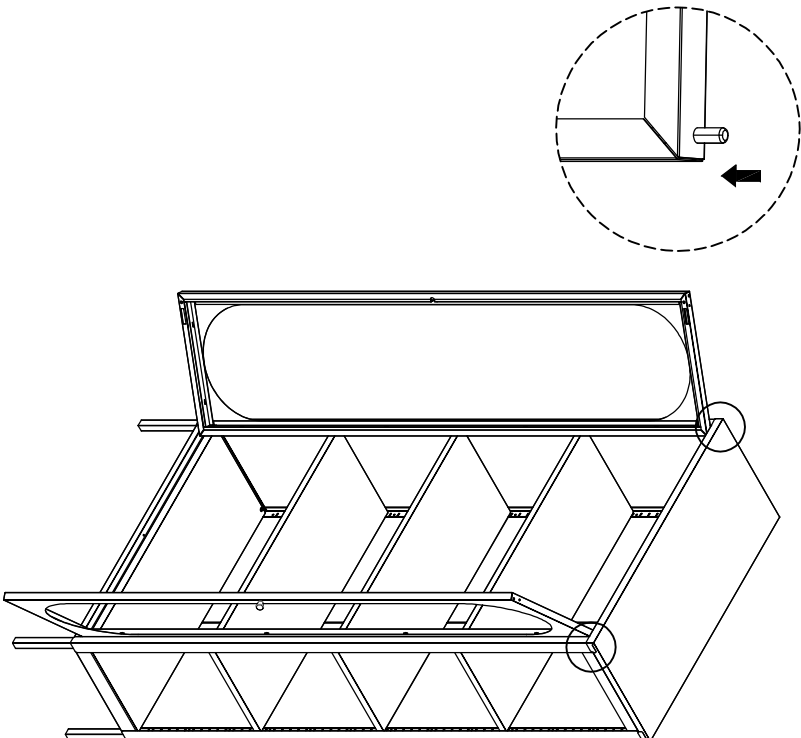

(10)

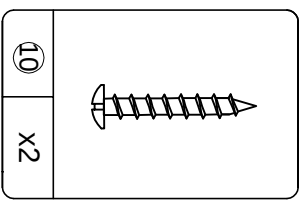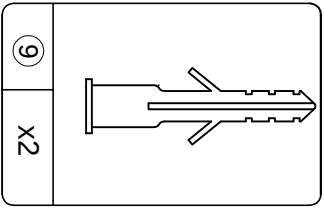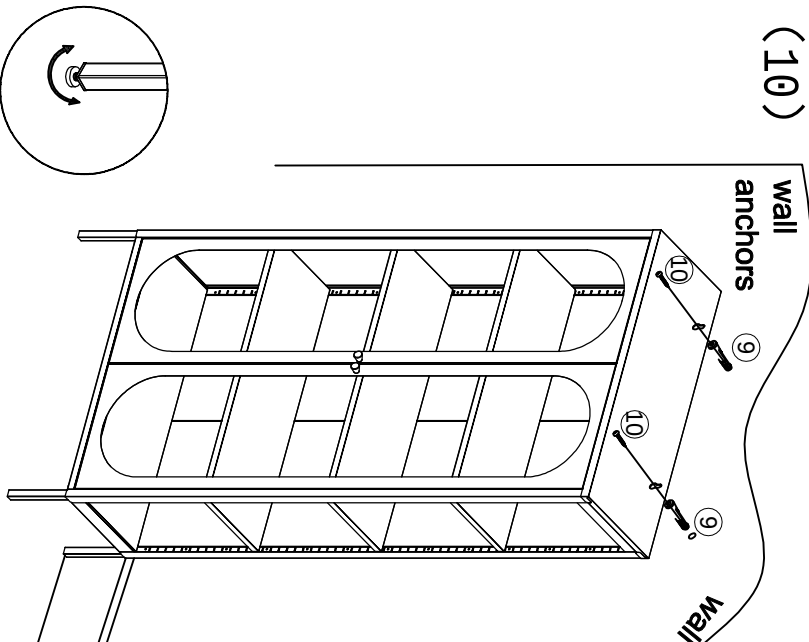

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.